


## RADON TEST KIT PLACEMENT DIAGRAM

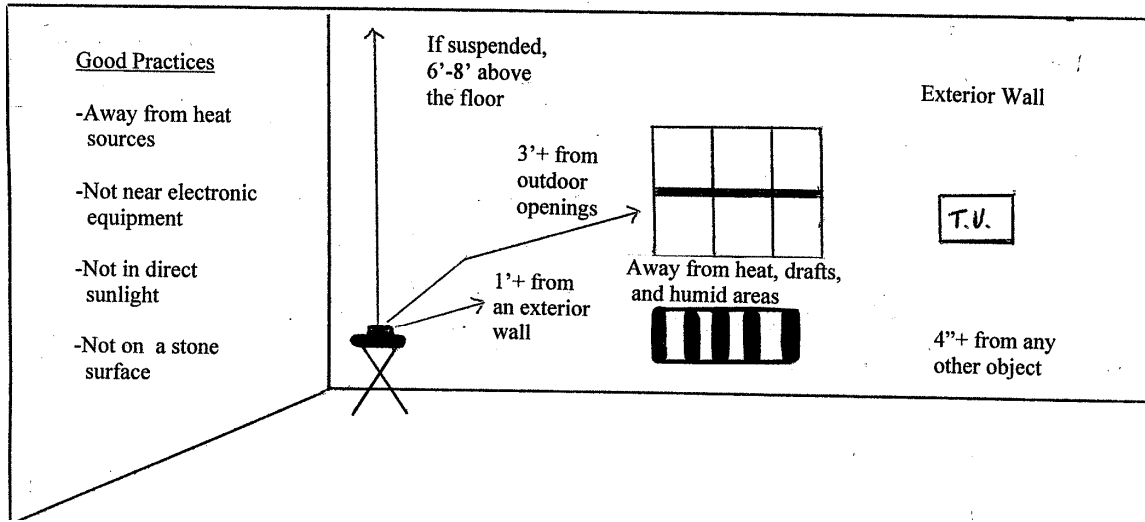

### Radon Test Kit Placement Guidelines

The following criteria should be used to select a location for your radon test kit within a room:

- 1.) The test kit should be placed in the lowest level of the home that is regularly occupied. Caution: Do not test laundry rooms, hallways, bathrooms or kitchens.
- 2.) Select a location where the test kit will not be disturbed during the test period and where there is adequate room for the device.
- 3.) Do not place the kit in a location near drafts from heating ventilation or air conditioning vents, doors, fans and windows. Also avoid areas of excessive heat such as fireplaces or direct sunlight and areas of high humidity.
- 4.) The kit should be placed at least 3' from any window or other opening in an exterior wall. Furthermore the test kit should be placed at least 1' from any exterior wall.
- 5.) The test kit needs to be at least 20" from the floor and at least 4" from any other object. If your test kit has instruction to hang the detector then it must be suspended 6'-8' from the floor.
- 6.) Follow all instructions that accompany your individual test kit.